

datacolor

Ahiba IR Pro



USER'S GUIDE



Ahiba IR Pro User's Guide

(Part No. 72-990132, June, 2010)

All efforts have been made to ensure the accuracy of the information presented in this format. However, should any errors be detected, Datacolor appreciates your efforts to notify us of these oversights.

Changes are periodically made to this information and are incorporated into forthcoming versions. Datacolor reserves the right to make improvements and/or changes in the product(s) and/or program(s) described in this material at any time.

©2010 Datacolor. Datacolor, and other Datacolor product trademarks are the property of Datacolor.

Microsoft and Windows are either registered trademarks of Microsoft Corporation in the United States and/or other countries.

To obtain information on local agents, contact either of the offices listed below, or visit our website at www.datacolor.com/locations/.

Support Questions?

If you need help with a Datacolor product, please contact one of our top-rated technical support teams located around the world for your convenience. You can find contact information below for the Datacolor office in your area.

Americas

+1.800.982.6496 (toll-free)
NSASupport@datacolor.com

Europe

EMASupport@datacolor.com

Asia Pacific

ASPSupport@datacolor.com

Or contact your local representative.
Datacolor has representatives in over 100 countries ... for a complete list,
visit: www.datacolor.com/locations/

Designed and Developed by:

Datacolor USA
5 Princess Road Lawrenceville,
NJ 08648

Assembled at Datacolor Technology (Suzhou):

No. 288 Suhong Road,
Suzhou Industrial Park
Export Processing Zone B, Suzhou,
Jiangsu, P.R. China 215021

Committed to Excellence. Dedicated to Quality.
Certified to ISO 9001:2008 in Manufacturing Centers Worldwide.

Contents

Ahiba IR Pro	1
Overview	1
Features	3
Accessories	4
<i>Standard Accessories.....</i>	<i>4</i>
<i>Optional Accessories.....</i>	<i>4</i>
About the Beakers	4
Safety Labels and Precautions	5
<i>General Precautions.....</i>	<i>6</i>
<i>Electrical/Environmental Precautions.....</i>	<i>6</i>
<i>Use Precautions</i>	<i>6</i>
<i>Maintenance Precautions</i>	<i>7</i>
<i>Chemical Handling Precautions</i>	<i>7</i>
Operating Principles	7
<i>Heating and Cooling Schematic</i>	<i>7</i>
<i>Beaker Rotation.....</i>	<i>8</i>
Equipment Controls and Indicators.....	9
Overview	9
<i>Front of Unit.....</i>	<i>9</i>
<i>Inside of Unit.....</i>	<i>10</i>
<i>Back of Unit</i>	<i>10</i>
<i>Controller.....</i>	<i>11</i>
System Setup and Maintenance.....	11
<i>System Location</i>	<i>11</i>
Power Connections.....	12
<i>Water Connection.....</i>	<i>12</i>
<i>Main Power Connection</i>	<i>12</i>
<i>Controller Grounding Connection</i>	<i>13</i>
<i>Controller Power Supply.....</i>	<i>14</i>
Beaker Preparation, Cleaning and Maintenance	15
<i>Beaker Installation.....</i>	<i>15</i>
<i>Beaker Dosing.....</i>	<i>19</i>
<i>Beaker Preparation Basket.....</i>	<i>20</i>
<i>Beaker Cleaning and Maintenance</i>	<i>20</i>
<i>Touch Screen Display Care.....</i>	<i>20</i>
Program Controls	21
Overview	21
Controller and User Interface.....	22
"Operator"	22
<i>System Idle Screen</i>	<i>22</i>
<i>Run Program Screen.....</i>	<i>23</i>

<i>Process Running Screen</i>	23
<i>Delayed Program Run Screen</i>	25
<i>Run “Manual Mode” Screen</i>	25
<i>Program Maintenance Screen</i>	26
LED Indicators	26
Numeric Keypad	27
USB Host Interface	27
“Administrator”	27
<i>Program Directory Screen</i>	28
<i>User Setup Screen</i>	29
Programs	31
Overview	31
Limit Values	31
Creating a Program	32
Editing a Program	33
Deleting a Program.....	34
Copy a Program.....	34
Save to External Memory.....	34
Load from External Memory.....	35
Running a Program.....	35
Program Hold.....	36
<i>Hold Precautions and Tips</i>	36
<i>Manual Program Hold</i>	36
Alarms and Status Messages	37
<i>Audible Alerts</i>	37
<i>Troubleshooting Alerts and Alarms</i>	38
Appendix.....	41
Specifications	41
Minimum/Maximum Beaker Loads.....	42
<i>Minimum Beaker Load</i>	42
<i>Maximum Beaker Load</i>	42
Maintenance List.....	43
Glossary of Icons	44
Accessories	48
<i>Beaker Preparation Basket</i>	48
<i>Beaker Prep Basket</i>	48
<i>Dosing Accessories</i>	49

Ahiba IR Pro

Overview

Ahiba IR Pro is an infrared dyeing machine that handles a wide variety of processes in exhaust dyeing laboratories. It can be used as an atmospheric or high-temperature dyer. The unit can also be used to simulate wash fastness testing.






The Ahiba IR Pro controller includes firmware that is used to program customized temperature/time sequences. Microprocessor technology ensures that the controller accurately follows the pre-defined dyeing curves.



The user interface employs an icon-driven interface that helps eliminate all operator obstacles that exist with text-driven interface designs. A touch screen completes the data entry tools.

Features

- **Heating Source:** 3 1000W infrared quartz lamps.
- **Cooling Source:** Cold water heat exchanger system is used to control the chamber temperature and act to cool the beakers at controlled rates.
- **Temperature Monitoring:** Protects the equipment and samples from overheating.
- **Type of Fibers:** All fibers
- **Dyeing Positions:** Accommodates up to 20 dyeing positions
- **Types of Substrates:**

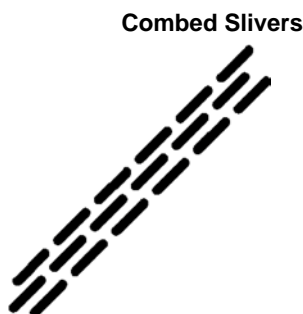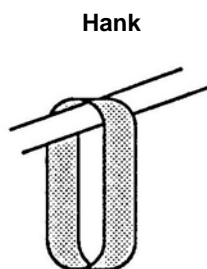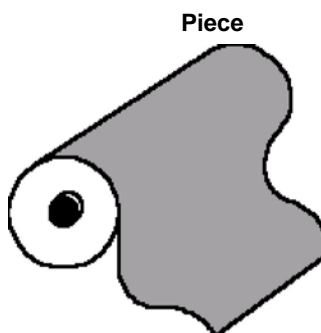

- **Liquor Ratio:**
1:3 (Synthetics)
1:5 (Natural)
- **Wash Fastness Testing.** Unit can also be used to simulate wash fastness testing.
- **User Interface:** Icon and menu-driven user interface. Maximum number of custom programs stored locally is 99, each containing a maximum of 15 steps.

Accessories

Standard Accessories

The following accessories are included with the system:

- Hex screwdriver for tightening and loosening beaker tops
- Reference beaker
- Complete set of beakers. Note: If optional dosing beakers are ordered, all necessary accessories to complete the dosing process will be included.
- Replacement set of o-rings for beaker lids
- Beaker preparation basket
- Spare bayonet sensor
- USB Flash Drive (Containing: User Manual, Wiring Diagram, Application Program)

Optional Accessories

Optional accessories for the Ahiba IR Pro include the following:

- Self-refilling dosing syringe
- Accessories for membrane dosing
- Accessories for injection dosing

These accessories can be ordered with the system, or ordered at a later time. See also *Appendix, Accessories List* for details to order these accessories.

About the Beakers

The Ahiba IR Pro can work with several different beaker sizes. A standard unit includes a single set of beakers, and the beaker size is defined when the order is placed. The table below summarizes this information:

Beaker Size (Maximum)	Maximum Number of beakers that can fit into the unit	Ideal Sample Size
150 ml	20	5 grams
300 ml	15	10 grams
500 ml	8	25 grams
500 ml	10	25 grams
1000 ml	8	50 grams
5 liter	1	250 grams



INFORMATION

A unit can be equipped with either dosing or non-dosing beakers. Injection dosing or membrane dosing beakers are available.

Units equipped with a 5L drum should limit the heating gradient input to 2.5°C/min, this due to the mass of the beaker and to prevent "Temperature out of Range" errors.

A unit fitted with either dosing option will include all accessories required to accomplish the dosing (e.g. 10cc self-refilling dosing syringe, dosing adapter or needle pack).

The ideal sample size is based on 10:1 liquor ratio. The maximum fill volume of the beaker should be limited to less than 2/3 of the total beaker volume, to achieve maximum agitation of the sample and dyebath inside the beaker.

The number of beakers supplied is based on the number of dyeing positions ordered with the unit.

See also Appendix, Optional Accessories in this guide for a complete list of optional accessories.

Safety Labels and Precautions

The following symbols are found on the equipment and in the documentation:



Do Not Touch



Surface is Hot. There is a danger of burn injuries in the operation of this unit.



High Voltage



Hot Air Exhaust



Stop. Warning that a specific action is prohibited.



CAUTION. When this appears in the documentation, it indicates that the step to be performed requires precautions.



INFORMATION. Indicates there is additional information relevant to the topic..

The precautions below should always be considered during the unit assembly, operation and maintenance.

General Precautions

- The equipment shall only be operated as instructed in this guide. If equipment is used in a manner other than that specified in this document, the protection provided by this instrument may be impaired.
- Read this user's guide carefully before placing the unit in service.
- This unit weighs 75kg. Any movement or relocation of the unit requires a minimum of four persons.

Electrical/Environmental Precautions

- To prevent an electrical shock or fire, be sure to use the power cord supplied by Datacolor.
- The power cord must be plugged into an outlet with a protective grounding terminal. Do not invalidate protection by using an extension cord without protective grounding.



CAUTION

Turn main power switch to **OFF** and remove the power cord from the electrical outlet before any internal service work is done.

Use Precautions

- Unit is to be used only as laboratory dyeing equipment.
- Units equipped with a 5L drum should limit the heating gradient input to 2.5°C/min, this due to the mass of the beaker and to prevent "Temperature out of Range" errors.
- Continue operating only as long as the unit functions properly.
- Certain internal parts may reach a temperature greater than 50°C/122°F. Unit can only be operated when the door is closed.



CAUTION

When door is opened, internal parts should only be handled after the unit has *cooled to 50° C*.

Maintenance Precautions

- Unit should be operated, maintained and repaired only by authorized, trained personnel.
- Careful cleaning of the unit enhances the reliability and extends the life of the equipment.


Chemical Handling Precautions

- Always observe the standards and regulations applicable to the chemicals being used.
- Datacolor assumes no responsibility for the handling of chemicals.

Operating Principles

Ahiba IR Pro consists of a rotating wheel that accommodates a maximum of 20 beakers. The unit employs a radiant infra-red heating technology to heat the liquor in the beakers, and uses a cold water heat exchanger-cooling system. The design reduces energy consumption while providing temperature control and accuracy.

Heating and Cooling Schematic

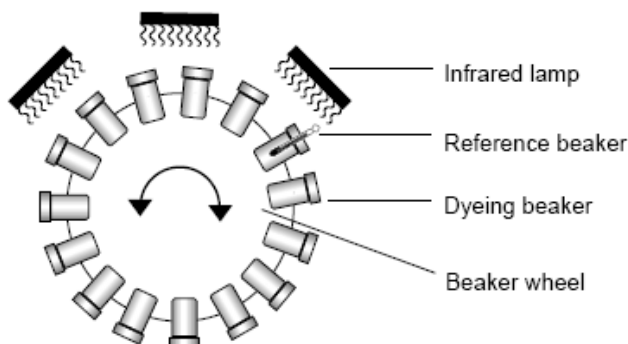


- Three (3) high-performance infrared lamps are used to heat the beakers. They are mounted at the top of the unit. The heat is transferred from the beaker to the dyebath liquor.
- The design of the beakers ensures accurate beaker-to-beaker temperatures.
- A reference beaker fitted with a temperature sensor is used to measure the dyebath temperature. The actual temperature is reported to the controller via a rotary switch.
- 2 high CFM blower fans are used to circulate air in the chamber; this constant air flow ensures level heat transfer to all beakers. To cool the beakers a cold water solenoid opens and allows cold water to flow

through the heat exchanger and this cold air is blown into the dyeing chamber and heat transfer between the beakers happens. The hot air is circulated back through the heat exchanger and cooled.

- A multiple back-up safety system monitors the temperature and protects the equipment and samples from overheating.

Beaker Rotation

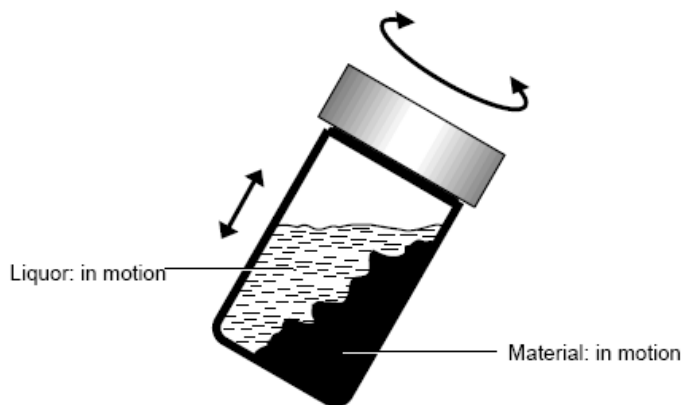

- **Rotation Speed:** 5 – 50 rpm (selectable)
- **Beaker Movement:** Programmed reverse function reverses wheel direction in accordance with parameter set in dyeing program (0-9 min).

Equipment Controls and Indicators


Overview

This section itemizes all of the controls and indicators included on the Ahiba IR Pro.


Front of Unit



Inside of Unit

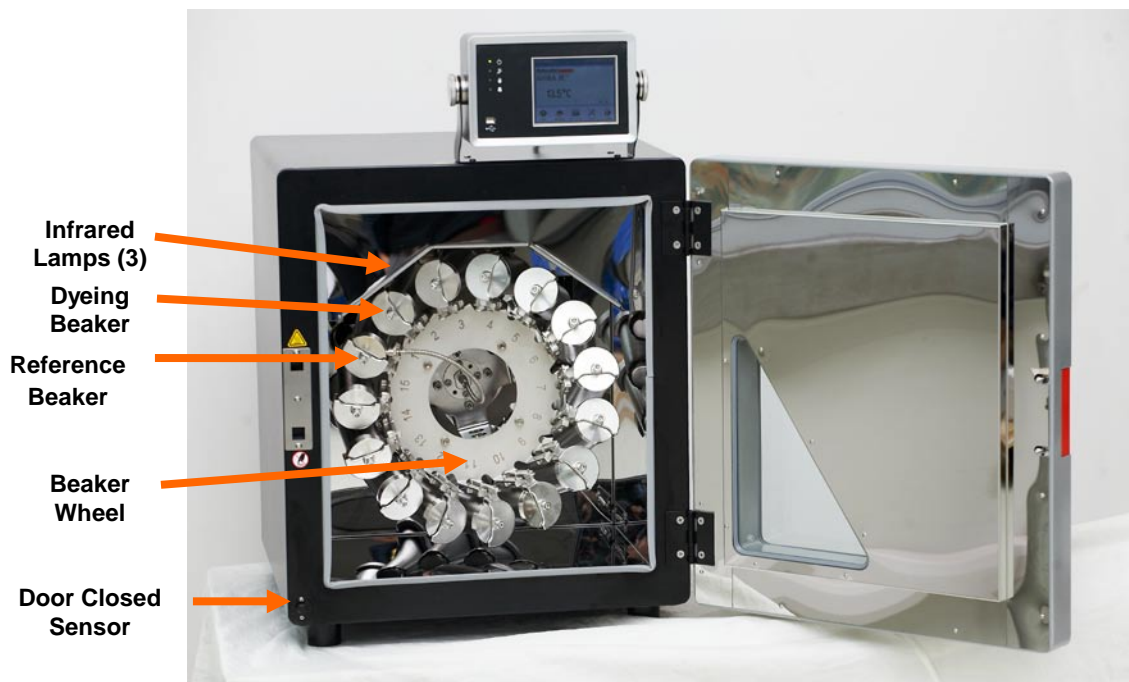

Back of Unit

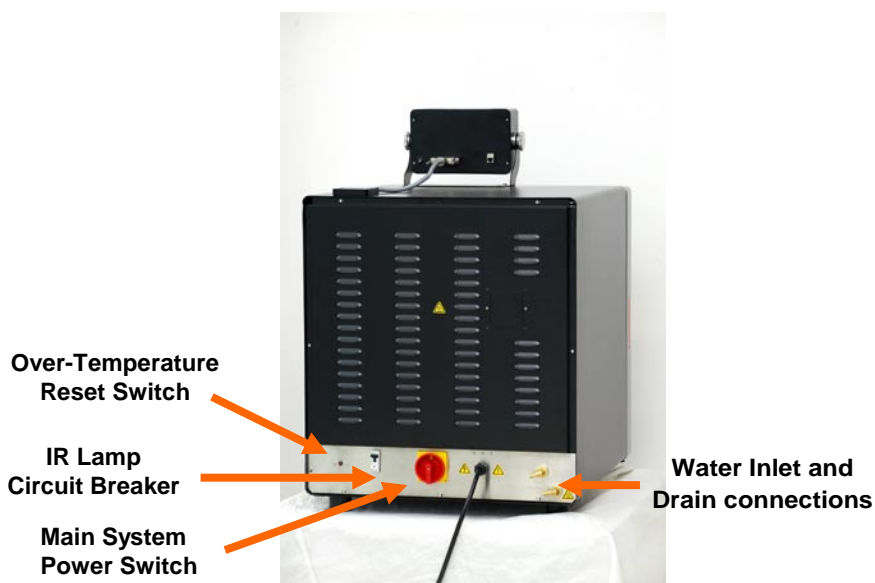


Controller



System Setup and Maintenance

The steps required to prepare the unit for operation include:

- Select a location
- Mount the controller to the machine (hardware provided)
- Attach controller grounding wire.
- Connect main communication cable to the controller
- Connect unit to power source
- Connect to cold water supply and gravity drain
- Beaker installation

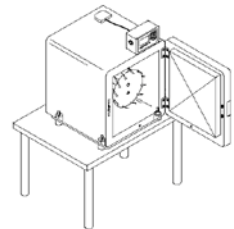

System Location

The Ahiba IR Pro should be placed on a stable, level table. The table should have sufficient height to allow for easy opening and closing of the door, and easy viewing of the controller.



CAUTION

There should be a minimum of 6 inches (152mm) between the back of the unit and the wall or any other obstacles, for proper ventilation.

Power Connections

The controller and the Ahiba IR Pro base unit have separate power controls.

Water Connection

Water: Use only filtered and softened water.

Pressure: 2-3 bar (30-45 psi)

Hardness: <10 dH

Temperature: Ideally <15°C

Hose: Min. diameter 3/8" (10mm), Hi Temp.

Main Power Connection

You must connect the power cord of the unit to an electrical outlet or power box with proper earth grounding.



CAUTION

The power connection should be made by a certified electrician.



INFORMATION

Prior to connecting the Ahiba IR Pro unit, ensure that the local line voltage agrees with the line voltage specified on the name plate. *See also Main Power Supply Connection below for schematics.*




Power Cord

The Ahiba IR Pro requires a proper earth ground.

Controller Grounding Connection

In order to protect the electronics in the controller box a grounding wire must be installed between the controller and the base unit. This wire is provided for you. Ensure the connections are tight. See illustration below:

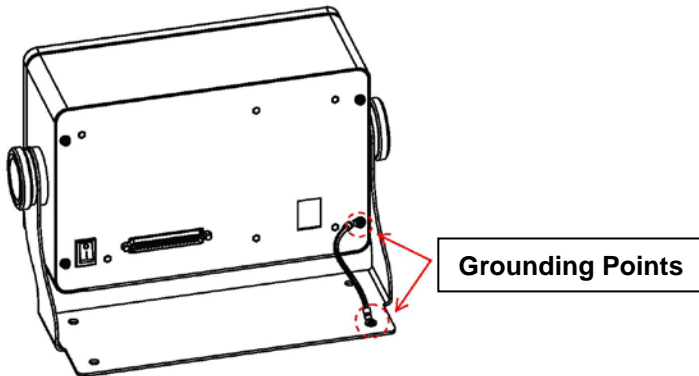


Main Power Supply Connection

Below are the power connections that can be used.


230V AC standard mains (e.g., Europe)

230V AC, 1N/PE, 50/60 Hz, 3850 W; Fuse: 15 A

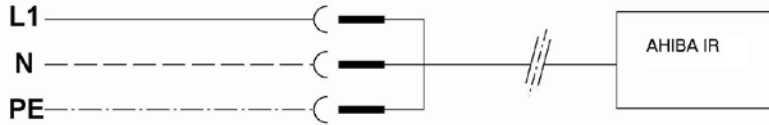

230V AC high power mains (e.g., US, Canada, Japan)


230V AC, 2/PE, 50/60 Hz, 3850 W; Fuse: 15 A

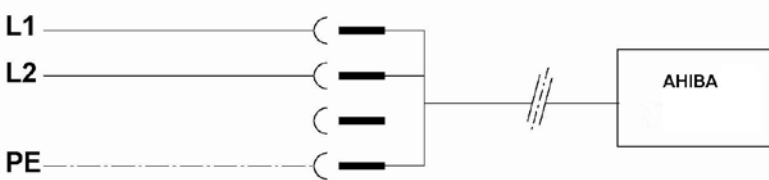

Controller Power Supply

The Ahiba IR Pro controller is powered separately from the machine. Before turning the controller on, check that the power connection from the main power cord is completed and checked for correct voltage levels. When you have verified the connection:

1. Turn on the main power switch located on the lower back of unit.
2. Locate the controller power switch on the rear of the controller box:

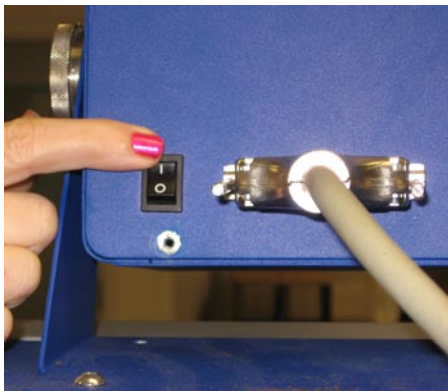


3. Press the top of the button to activate the controller. Press the bottom of the button to cut the power to the controller.

Beaker Preparation, Cleaning and Maintenance

Beaker Installation

The beaker wheel is fitted with a simple mechanical latching system to lock the beakers in place on the wheel. Beaker installation includes the following steps:

- Secure beaker lids. This is done each time a dyeing process is run.
- Install beakers
- Install/connect reference beaker and sensor cable

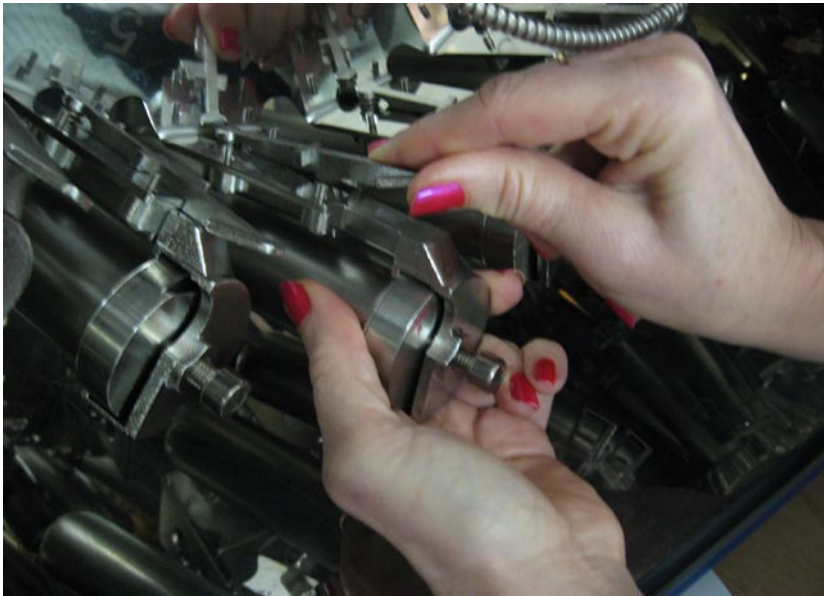


All of the steps described below must be performed for each dyeing cycle.

Securing the Beaker Lids

Before the beakers are attached to the wheel, the lids must be secured using the hex screwdriver supplied with the unit. To secure the lids:


1. Ensure beaker lid and beaker flange are a smooth and even seal.

2. Tighten the dog point socket head screws using the hex screwdriver provided with the unit.

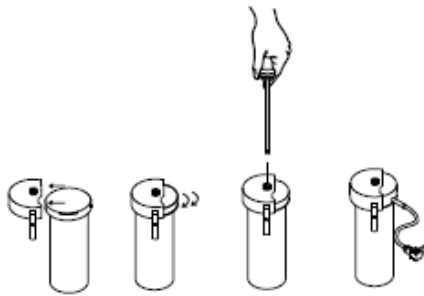

CAUTION

 Do not replace hex screwdriver with a hex key.




This will cause the lid to be over tightened.

3. Install the beakers on the wheel.

Use the following guidelines when installing the beakers on the wheel:

- Do not mix beaker sizes in a single process. All beakers loaded on the wheel must be the same size.
- The Ahiba IR Pro uses custom designed pressure-tested beakers. The seal between the beaker and the lid is accomplished with an o-ring seal. This o-ring is a maintenance part and additional o-rings are supplied with the unit.
- Over tightening of the beaker will damage the o-ring and cause damage to the lid. If additional tightening is required to ensure the seal, it is time to replace the o-rings. *See also Appendix, System Maintenance for the maintenance schedule.*

- The beakers should be distributed evenly around the wheel. Do not overload one section of the wheel with the beakers (see diagram below).

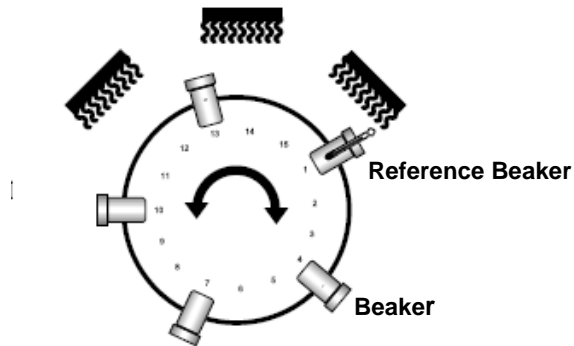


- All beakers must have the same liquor volume.
- All beakers should be the same approximate temperature as the reference beaker.

See also Appendix, Beaker Loads for minimum and maximum beaker load specifications.

Beaker Connections

Below are some guidelines to consider when connecting a beaker to the wheel:

- The sensor lead is connected and locked to the beaker by the rotating collar of the sensor.
- Continue turning the collar until the connection is locked.
- To insure that the cable is locked to the beaker lid, pull on it slightly.

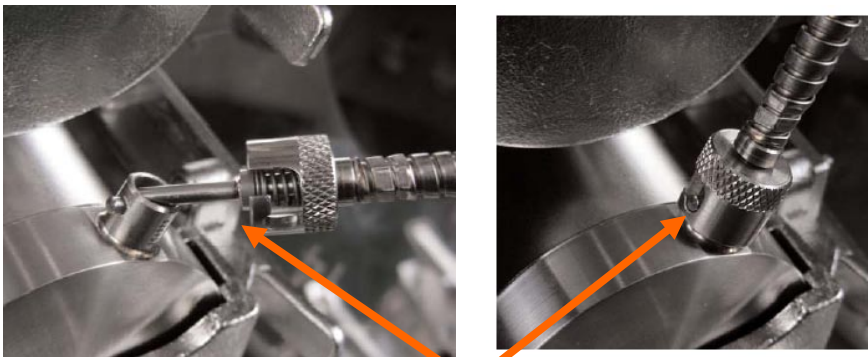

Sensor



INFORMATION

The reference beaker ALWAYS serves as a dyeing beaker. This ensures that all beakers have the same volume, and begin the process at the same temperature, and will result in accurate, repeatable dyeings.

Temperature Sensor Cable

The Bayonet PT-100 temperature sensor cable should remain connected to the machine at all times. The only reason for removal is for defect, and it must be replaced.



INFORMATION

The temperature sensor cable is plugged into the center of the drive shaft. It is secured by a holding clamp. This prevents accidental disconnection of the sensor from the plug.

The sensor should be connected to the reference beaker before installing the beaker on the beaker wheel. It should be removed prior to removing the reference beaker when the dyeing is completed.



CAUTIONS


- Avoid pulling hard on the temperature sensor cable.
- Avoid wetting the temperature sensor cable with water.
- Avoid heavy bending of the cable.
- The reference beaker lid can be heated to a maximum of 140°C (284°F)
- Do not connect the temperature sensor cable to the reference beaker lid until the lid is completely dry.

Beaker Dosing

The Ahiba IR Pro can be ordered with custom beaker lids that allow you to inject liquid chemicals into the beakers during the dyeing process. Dosing is done using a self-refilling, manual dosing syringe, an optional accessory available with the unit.

All dosing beakers are fitted with a patented dosing protector that diffuses the flow of the liquor onto the substrate. This prevents the chemical from coming into direct contact with the substrate.

Below are drawings of the installation of the dosing protector:

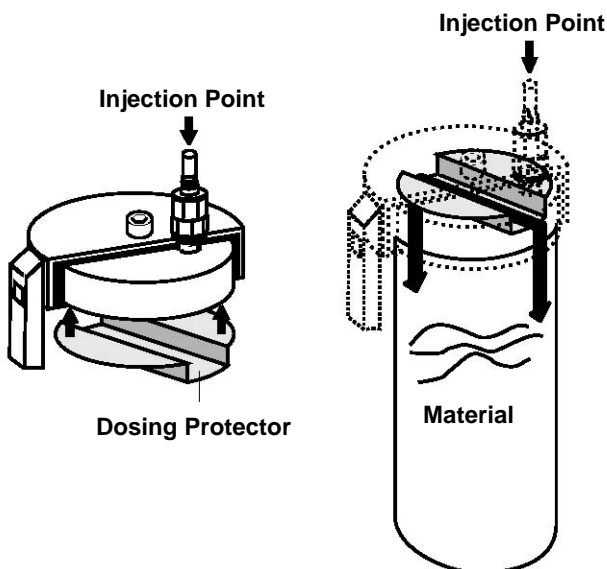

INFORMATION

When dosing a beaker, the liquid chemical being dosed should not come into direct contact with the substrate. All dosing beakers are fitted with a dosing protector, which diffuses the flow of the liquor onto the substrate. This prevents the substrate from being directly contacted with the chemical.

Thoroughly rinse the injection nipples with warm water after each use. This cleans the working parts, extends the life of the seals and prevents clogging due to dried chemicals.

Self-Refilling Dosing Syringe

A self-refilling dosing syringe can be used with Ahiba IR Pro. *See also Appendix, Accessories, Dosing Syringe Accessories for details on replacement parts.*

Beaker Preparation Basket

The Ahiba IR Pro comes standard with a beaker preparation basket with each unit. This is included with your unit, it must be assembled. Directions for assembly are supplied. *See also, Accessories, Beaker Preparation Basket for a picture.*

Beaker Cleaning and Maintenance

All beakers must be removed and cleaned after each dye cycle. In most cases cleaning with water after each dye cycle should be sufficient. However if dyestuff is still present, a chemical cleaning should be performed to remove and residual dyestuff remaining in the beaker. The beakers, lids and brackets can be cleaned in a washing machine (e.g. glass washing machine, ultrasonic cleaner, etc.)

All beaker lid o-rings should be inspected prior to use and replaced if any sign of wear such as flattening, tears or cuts are observed. *See also Appendix, Maintenance Schedule for maintenance information.*

Touch Screen Display Care



Cleaning:

- Use soft lint free cloths, either distilled water or screen cleaner (if you use screen cleaner, make sure it's ammonia and alcohol free), and optionally, you can have cleaning wipes (wipes which are specifically designed for this purpose.)



Don't:

- Don't give unnecessary pressure on screen as it will not work better with more pressure. It is a touch screen not pressure screen. So use reasonably delicate touch with it.
- Don't use tap water or mineral water as they could leave white marks on the screen because of the dissolved salts.
- Don't use paper towels or any type of cloth that is not lint-free, as they can leave residue or even scratch the display.
- Don't spray liquid directly on the screen. Apply liquid to a cloth and then wipe the screen.
- Don't use Windex or any other glass cleaner that contains ammonia or alcohol, as they can degrade the display panel.
- Don't clean the display while it is on. When the display is dark, it is much easier to see dirt and fingerprints that need to be removed.

Program Controls

Overview

The Ahiba IR Pro employs a powerful user interface that communicates programming and system information, using internationally-recognized symbols, translatable text and icons. Because of this design, Ahiba IR Pro allows for maximum flexibility and delivers a very easy to follow and understand interface.

The IR Pro's color touch screen display utilizes color change to alert the operator of certain statuses and LED lights and a status bar visually displays important information about the process. The controller also has a variable audible alarm system that alerts the operator to the conditions and status of the process. Sophisticated firmware runs monitoring and controls in the background, ensuring the proper operation and control of the process. When an error occurs, the controller communicates the error via text status messages, display color change, LED light and audible alarms.

The Ahiba IR Pro works with stored programs that contain customized time and temperature dyeing sequences. The unit can hold a maximum of 99 programs, each having a maximum of 15 steps. A stored program remains in the system memory until it is deleted by the operator. Programs can be edited to change processing specifications, or to add or remove steps. An installed USB flash drive slot allows for fast program back-up and transfer of programs to multiple machines.


One step in a program includes the following inputs:

- Temperature
- Gradient
- Time at temperature
- Speed of rotation
- Reversing time
- Hold process step (if needed)

This information is entered through touches on the display and a numeric keypad and icons on the display screen.

Controller and User Interface

The Ahiba IR Pro interface is an icon and text driven touch screen interface. Multi-language translated icons are available. The controller is operated in two primary ways – as an operator or an administrator. Password protected controls allows administrators to restrict or allow access to operators. The default setting for “operator” allows only running of stored processes and manual mode operation. The following sections will describe operations as an “operator” and later as an “administrator”.

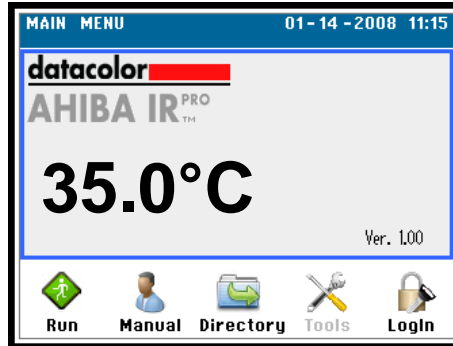


“Operator”

By default for an operator the Ahiba IR Pro will allow access to 3 main screens:

- Run Program Screen
- Run “Manual Mode” Screen
- Program Directory Screen


System Idle Screen

The Main Menu or “System Idle” screen is displayed when the system is powered on. It is also displayed when no process is running.

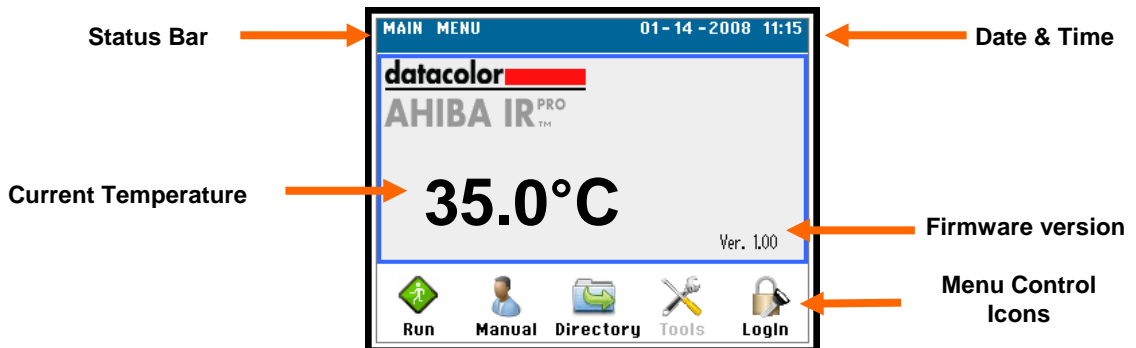


Run Program Screen

Pressing “Run” icon from the system idle screen will drive to the Run Program screen and allow the operator to select a program to run or run in “delayed run” mode. Simply touch to highlight the desired program number and then press “Run” or “Delayed Run”. Page advance buttons will advance the screen by one page at a time to access all 99 program slots. Programs are sorted by the program number assigned at the time the program was created. Pressing the “Home” button will drive to the system idle screen.

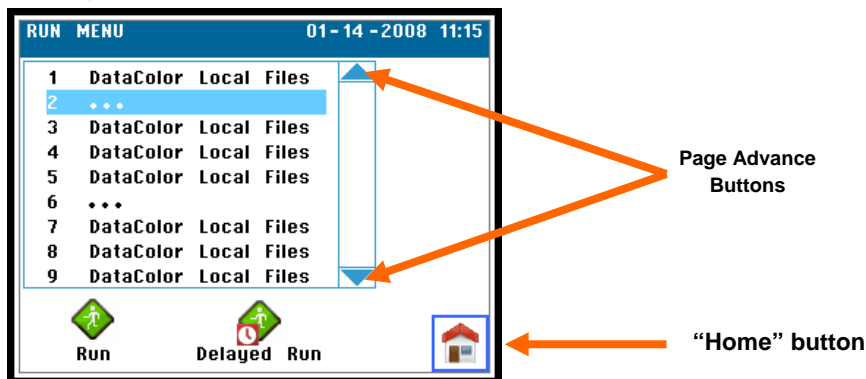

Process Running Screen

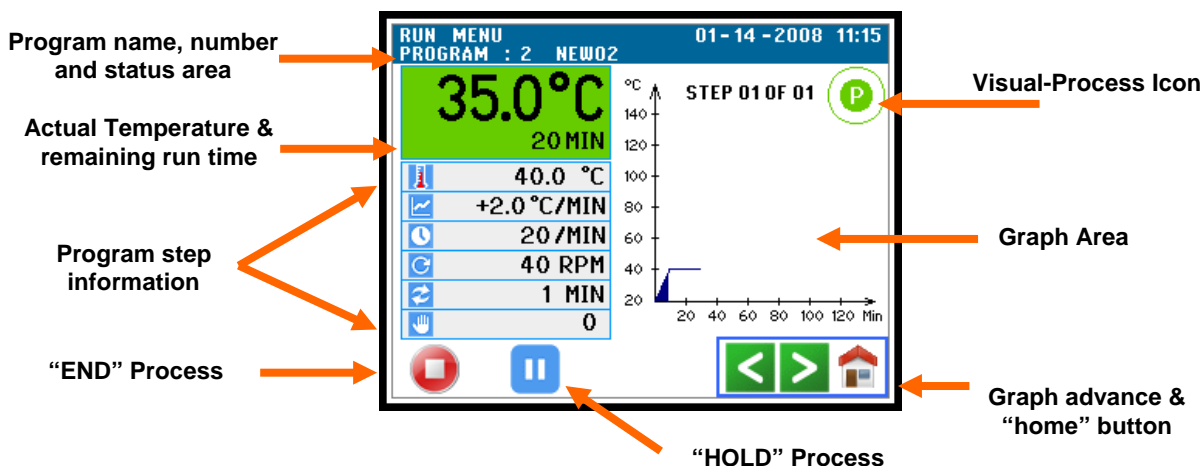

The Process Running Screen will display as below: all the parameters for a program.




The Process Running Screen display includes all the information needed to know the exact status of the machine and the progress of the process.

- **Program Name, Number and Status Area.** Displays the name and program number of the program running. This area will also display any status messages that are needed to the operator. This area will change colors as different statuses are registered.
 - **Colors.** Normal = Blue
Hold = Yellow
Alarm = Red
- **Actual Temperature & Remaining Run Time.** A large readout of the actual temperature of the beakers and an estimated run time to end of the process. This area will change colors as different statuses are registered. Working normal this area is colored green.
- **Program Step Information.** Displays all the parameters of the programmed step.
- **“END” Process.** A button to “END” or stop the process. Pressing this will be followed by a confirmation screen.
- **“HOLD” Process.** A button to put the unit into a manual “HOLD” step. The temperature will remain as it is at the time HOLD is pressed until a “CONTINUE” button is pressed.
- **Visual-Process Icon.** Icons visible on all screens of the controller while a program is running. If you leave the process running screen the visual-process icon will still display and give you a visual reference of the status of the program. Step information will also be displayed with the icon. In the event of a HOLD or an error the character in the center will change and the color will change.
- **Graph Area.** Displays a graphical reference of the status of the running program. All steps programmed in the process will be displayed. As the program progresses the graph area will shade in full. Maximum displayed graph area is 120min. Pressing left and right arrows will advance the graph.

Delayed Program Run Screen

After selecting a program and “delayed program run” button is pressed you must enter a date and time of when you wish the program to start. Touching the area will open a numeric keypad to enter the data. After setting the date and time press the save  button and the delayed start will begin. If you wish to stop the delayed program run simply press the cancel  button and the process is stopped.

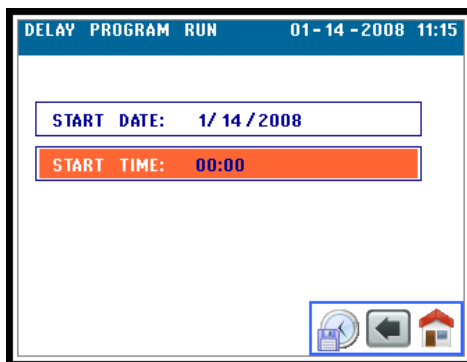


INFORMATION

While the IR Pro is running in “Delayed Program Run” no other programs can be started. All monitoring systems are operating. The beaker wheel will turn at 5rpm during the delayed run to help agitate the beakers.

Run “Manual Mode” Screen


The Ahiba IR Pro offers a unique ability to input a quick single step program called “Manual Mode”. All features operate exactly the same as program mode with the exception of multiple steps. Touching the area will open the numeric keypad and allow the data points to be changed.

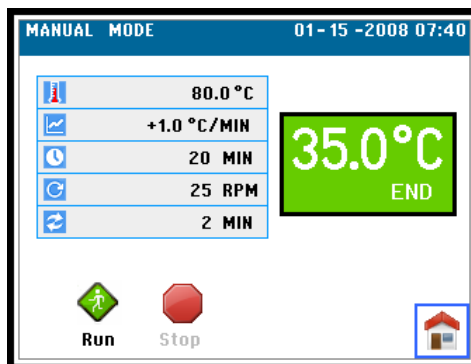

Program Maintenance Screen

The program maintenance screen displays all available program slots. If the slot is already occupied, the name of the stored program will be visible. If no program exists in a slot, "..." will display for the slot. The directory consists of multiple screens to accommodate all 99 program slots. Page advance buttons on the right side allow you to advance to other pages.

In "operator" mode all functions are grayed out except "RUN". You must be logged in as "administrator" or have been given rights by the administrator to access the other functions allowed on this screen.

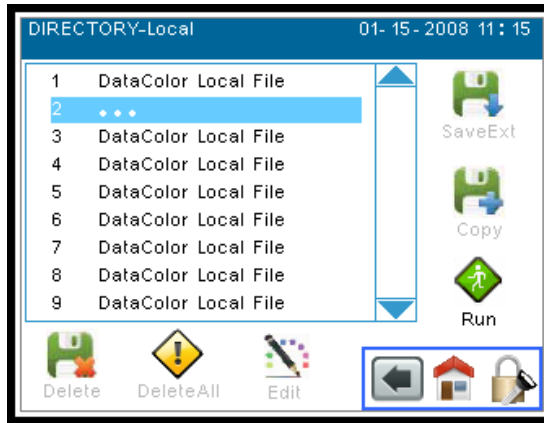





LED Indicators

LED indicators are located on the left side of the controller. These are used to communicate specific information to the operator. They are bright and visible from a distance, making it easy to monitor the system status from across a room.



Below is a key for these symbols:

Indicator	Function
	Power On. When controller is on, this indicator is solid green.
	Process Running. When process is running, this indicator is flashing blue.
	Alarm. When controller detects an alarm, this indicator is solid red.
	Process Hold. When a programmed hold or manually-set hold is applied, this indicator is flashing yellow.

Numeric Keypad

On Ahiba IR Pro at times when areas of the controller are pressed where numerical data is needed a keypad will be displayed.

USB Host Interface



The Ahiba IR Pro controller has onboard a USB host interface. This interface serves to allow for program back up and transfer to other units or a PC for additional storage.


- During a program run if the USB flash memory is plugged into the slot on the controller the program information will be recorded on the drive for easy reading on a PC. This information will include a plot of the actual performed dyeing curve compared with the programmed curve, time and date stamp of each reading. The read interval will be every one minute.

“Administrator”

The IR Pro offers lab managers the flexibility of assigning task or limiting operators' ability to perform certain functions. If you are logged in as “administrator” you will have access to perform all task and functions on the Ahiba IR Pro controller. These tasks include:

- **Program Maintenance** – to include creating and editing programs, deleting programs from local and external memory, saving programs to external memory, loading programs from external memory, and copy programs from one location to another.
- **User Setup** – to include setting time and date, change the master temperature configuration, and authorizing “operator” access to tasks.
- **Password Setup** – you can assign a new password. The default shipping “PASSWORD” for Administrator is “3662”.


To Login as “Administrator” press the login icon from the “system idle” screen and enter the password. You will remain logged in until power to the controller is turned off or until you press the logout icon from the “system idle” screen.

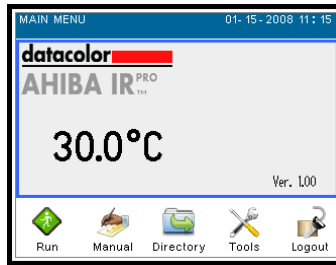

Notice the “Tools” icon is no longer grayed out and the “login” icon has changed to a “logout” icon.

Program Directory Screen

To perform program maintenance you must enter the screen through the “Directory” icon from the “system idle” screen then select which area you wish to perform the maintenance – either the “local memory” or the “external flash drive memory”. More detail of how to perform tasks will be described later

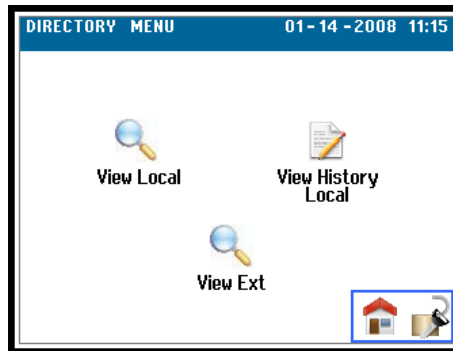

Local Memory

In the local memory you can:

- Delete an existing program from the local memory
- Delete ALL local memory
- Save a local program to the external flash drive for back up or transfer to another unit.
- Copy a program from one memory location slot to another
- “RUN” an existing program
- Edit and existing program or create a new program.

External Memory

In the external memory you can:

- Delete an existing program from the external memory
- Delete ALL external flash drive memory
- Load a program from the external flash drive to the local memory.

View History Local

The History file is a historical data file of the last 30 programs run on the unit. This is only viewing data. The data stored is the program number and name, the start time and date, the end time and date, and if any errors were recorded.

User Setup Screen

The user setup screen allows administrators to configure the controller as your lab needs prescribe:



- **Temperature & Time Setup** – is an icon that will allow you to adjust the controller to display all temperatures in °C or °F. It also allows you to adjust the date and time and format of the date and time display.
- **Password Setup** – is an icon that allows you assign your unique 4 digit numeric password.
- **Language** – is an icon that allows you to select one of the 7 available languages (English, German, French, Spanish, Portuguese, Italian, or Chinese). The text under each icon will change and the menu names and status messages will all be in the language selected.
- **Operator Access** – is an icon that opens a screen that allows you to assign operator access to certain functions. These function include:
 - Program Maintenance
 - User Setup
 - USB Host Interface

Programs

Overview

This section provides instructions and examples for creating a program for Ahiba IR Pro. Keep in mind the following:

- You must be logged in as administrator or have been given access by the administrator to access this function.
- The local memory can accommodate up to 99 programs.
- Programs can have alpha-numeric program names of up to 19 characters or a *default* name will be assigned.
- A program can include up to a maximum of 15 steps.
- A step is defined a temperature, gradient, time, rotation speed, reverse rotation, and process HOLD

A process HOLD is generally used when the program requires operator intervention. A hold can be included as a program step, or can be inserted manually at run time. *See also Running a Program, Program Holds for a detailed discussion of this option.*

Limit Values




When entering data for a program, all entries are checked against the following limits to ensure they are within the operating range of the machine:


Parameter	Limit Value
TEMPERATURE (Processing temperature)	+20°C +140°C +77°F +284°F
TIME (minutes)	0 – 180 min
GRADIENT	-4.0°C +4.0°C/min -7.2°F +7.2°F
(optional input)	"MAX" – uncontrolled
SPEED	5 – 50 rpm
REVERSE	0-9 min
HOLD	0 or 1

Units equipped with a 5L drum should limit the heating gradient input to 2.5°C/min, this due to the mass of the beaker and to prevent "Temperature out of Range" errors.

Creating a Program

Below are the steps for creating a new program:

1. From the *System Idle* screen, press the Directory  button. Select the local memory. The Program Directory screen displays.
2. Select an empty memory location “...” and the line will highlight. Next press the program edit icon . An automatic program name is assigned “NEWP#”. If you wish to change it, press and highlight the “name” area and a keyboard will display and a different program name can be assigned. If enter is pressed your program name will save.
3. After assigning a program name press the enter  icon. The below screen is displayed and known as the program edit screen.

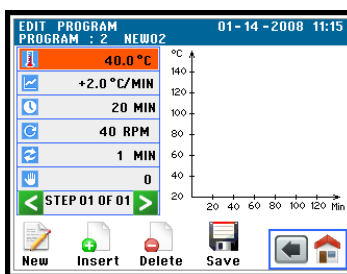

4. The screen above shows all the data that can be entered for a single step. Default values are already assigned for certain areas. To gain access to an area simply touch the area and it will highlight and a numeric keypad will display so data can be entered. Pressing enter will save that data.



Temperature control icon. Provides control to the temperature input line.



Gradient control icon. Provides control to the gradient input line.



Time control icon. Provides control to the time input line.





Motor Speed control icon. Provides control to the rotational speed input line.






Reversing icon. Provides control to allow the beaker wheel direction to be changed at preset intervals.










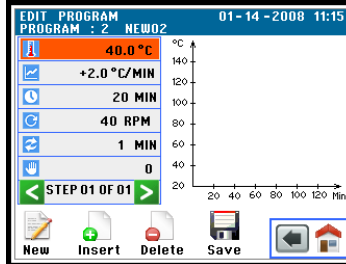


Hold control icon. Provides control to HOLD input line. Also used to put the unit into manual hold.

5. After all step data is entered press the new step  icon to enter additional steps (you may enter up to 15). Data from the previous step is automatically written into the new step so you only need to edit the area that needs changing. After all steps are entered press  to save your program.

Editing a Program



 
1. From the *System Idle* screen, press the Directory  button. Select the local memory. The Program Directory screen displays.
2. Select an existing program from the local memory and the line will highlight. Next press the program edit icon .
3. Press the enter  icon. The below screen is displayed and known as the program edit screen.






4. All steps previously stored are accessible. Use the   icons to advance the program to the step you wish to edit the data. Touch and highlight the area you wish to change the data and a keypad will appear to enter the data. After all changes are made press  to save your changes.
5. In the program edit section you have the ability to insert a new step or delete a step of a given program.
 - **To Insert a step** - use the   icons to get to the step you want to insert a step *at* and press insert step  icon and a new step is created and all future steps are advanced by 1 step. The data of your new step can be edited.
 - **To Delete a step** - use the   icons to get to the step you want to delete and press delete step  icon and the step will be deleted and all future steps are reduced by 1 step.

Deleting a Program


From Local Memory

1. From the *System Idle* screen, press the Directory  button. Select the local memory. The Program Directory screen displays.
2. Touch and highlight the program number you wish to delete. Press the delete  icon, a confirmation menu will appear, pressing “yes” will delete the program from the local memory.
3. You can also “Delete All” local memory. By pressing the delete all  icon, a confirmation menu will appear, pressing “yes” will delete *ALL* programs stored in the local memory.

From External Memory

1. From the *System Idle* screen, press the Directory  button. Select the external memory. The Program Directory screen displays.
2. Touch and highlight the program number you wish to delete. Press the delete  icon, a confirmation menu will appear, pressing “yes” will delete the program from the external memory.
3. You can also “Delete All” external memory. By pressing the delete all  icon, a confirmation menu will appear, pressing “yes” will delete *ALL* programs stored in the external memory.


Copy a Program

Is a function on the IR Pro controller that allows you to make an exact copy of an existing program in a different program slot. From the program directory screen you can highlight a program and then press the copy  icon and assign your copied program to a new program slot. A confirmation menu will appear. If you try to copy to an existing “full” location you will have the ability to over-write.

- You might use this function if you only want to change or edit a small part of the program to run and not lose your original program information.



Save to External Memory

The IR Pro controller has the ability to back up your locally stored programs to a USB flash drive (supplied with the unit). This back up can be useful to transfer programs between multiple machines or to transfer data between your controller and your PC.

- From the program directory screen you can highlight a program and then press the save  icon and assign your copied program to a new program slot. A confirmation menu will appear. If you try to save to an existing “full” location you will have the ability to over-write.

Load from External Memory

The IR Pro controller allows for programs created on other machines to be easily uploaded into the local memory. Programs created on a PC can also be easily uploaded into the local memory via your USB flash drive (supplied with the unit).

- From the *System Idle* screen, press the Directory  button. Select the external memory. The Program Directory screen displays.
- From the program directory screen you can highlight a program and then press the load  icon and assign your program to a destination slot. A confirmation menu will appear. If you try to save to an existing "full" location slot you will have the ability to over-write.

Running a Program

The Ahiba IR Pro does not contain any programs stored at the factory. You must store a program, before you can operate the Ahiba IR Pro.





INFORMATION

The program can be manually stopped at any time by pressing the **STOP** button.



CAUTION

Do not unplug the bayonet sensor from the reference beaker when a program is running. The temperature will drop very quickly, activating temperature monitoring, and the program will stop running.


1. From the System Idle screen, press the  icon. The Program Directory screen displays. Press and highlight the program number you wish to run and then press the run  icon. Your program will immediately start and the display will switch to the *Process Running* screen.
2. The following information is displayed:
 - The actual beaker temperature and residual dyeing time clock (large font) will be displayed. This is the approximate time needed to complete all steps in the process.
 - The program name and number.
 - The program step information.
 - The visual-process icon will begin shading and the step number of the total steps is displayed.

- The graph will display an outline of the programmed curve, as the program progresses the graph area will shade in.
 - The Blue LED will be flashing.
 - The program will run through all steps in the program.
3. When the process is completed:
- The Blue LED will be turned off.
 - “END of Process” will be displayed in the status area.
 - An audible alert will sound.

Program Hold

A HOLD is generally used when the program requires operator intervention. An example of this is when the operator needs to dose (add) chemical auxiliaries at prescribed times in the process, it is pre-programmed.

If a HOLD is included in the program, you are alerted through the following warnings:



- An audible alarm will sound.
- The *Status Area* and *Temperature and Time Area* will change to yellow color.
- The visual-process icon will change color and the center character will change from “P” to an “H”.
- A status message will appear in the Status Area stating “Operator Action Required”.
- A yellow (hold) LED will light.
- Re-starting a program that is on “HOLD”, simply press the continue  icon and the display will return to normal and the next step in the program will advance.

Hold Precautions and Tips

- When a hold is enabled and the door opened, the IR lamps are turned off, and the motor stops turning. As a result, the temperature inside the beaker drops. You should limit the time the door is open.

Manual Program Hold

The operator can manually place a hold on the program. To do this:

- Press the Pause  icon. The program will hold its current position.
- The display will change as previously mentioned in a programmed HOLD.
- Press the continue  icon to resume the program.

Alarms and Status Messages

The Ahiba IR Pro uses a combination of visual and auditory alerts to communicate process and system information to the user. These include:

- Audible alert system
- LED panel
- Status Message Area and screen color change

Specific combinations of these alerts are used to communicate specific problems. *See also Troubleshooting Alerts and Alarms for complete information and corrective action to be taken regarding each alarm combination.*





Audible Alerts

The Ahiba IR Pro has three distinct audible alerts:

- **Continuous tone.** This is a general alarm.
- **Long Beep/Short Beep.** This indicates the current step is a program hold.
- **Series of Short Beeps.** This indicates the end of the program.
- Anytime there is an audible alert pressing the alarm silence icon will silence the alarm. It will not clear the alarm.


LED Panel




Below is a key for these symbols:



Indicator	Function
	Power On. When controller is powered on, this indicator is solid green.
	Process Running. When a process is running, this indicator is flashing blue.
	Alarm. When controller detects an alarm, this indicator is solid red.
	Process Hold. When a programmed hold or manually-set hold is applied, this indicator is flashing yellow.

Troubleshooting Alerts and Alarms

Below are alarm combinations that may occur while you are running a process and a fault is detected.

Alert/Alarm Combination	Message	Possible Problem
Temperature Alarm  <ul style="list-style-type: none"> • Continuous buzzer tone • Display and status area will turn Red color. • Red LED displays solid red • Type of temperature alarm is displayed in the Status Area 	<p>Different situations trigger this alarm.</p> <p>(1) System has detected a beaker temperature variation of greater than $\pm 5^{\circ}\text{C}$. The alarm is displayed on the screen and a continuous buzzer tone sounds.</p> <p>System will attempt to self-correct, depending on the situation. When the temperature variation returns to within $\pm 5^{\circ}\text{C}$, the alarm will reset. The buzzer will stop.</p> <p>(2) During a heating or cooling cycle in the program, the system has detected a temperature variation of $\pm 15^{\circ}\text{C}$.</p> <p>The program must be re-started at step #1 after the problem is corrected.</p> <p>(3) Controller has detected either a PT-100 open or PT-100 short circuit.</p> <ul style="list-style-type: none"> • PT-100 open -The screen displays a temperature of 350°. <p>When temperature is above 350°C, cooling system is activated.</p> <p>Alarm will automatically reset when correct temperature is measured.</p> <ul style="list-style-type: none"> • PT-100 Short Circuit- Temperature displays 0° <p>System will not operate until problem is fixed.</p>	<p>PT-100 Temperature sensor cable is unplugged or defective</p> <p>Problem with cooling line and is affecting the controllers ability to stabilize the temperature</p> <p>Problem with fan ventilation system and is affecting the controllers ability to stabilize the temperature.</p>

Alert/Alarm Combination	Message	Possible Problem
Door Open Alarm  <ul style="list-style-type: none"> • Continuous buzzer tone • Screen turns Red color. • Door Open appears on display status area. 	<p>Door has been opened while process is running</p>	<p>Defect in <i>door closed</i> sensor.</p> <p>The door is open</p>
Roll-o-Matic Alarm  <ul style="list-style-type: none"> • Red Alarm LED lights • Screen turns Red color. • Continuous buzzer. • Roll-o-matic error displayed in Status area. 	<p>Motor motion detection has stopped.</p> <ul style="list-style-type: none"> • When detection of the drive motor stops for more than 2 minutes, this alarm triggers. <p>The system will stop heating, and the program will stop. Program must be restarted from step #1.</p> <p>Alarm will reset and alarm icon will disappear when the wheel starts turning again.</p>	<p>Defective motor;</p> <p>Defective motor position switch;</p> <p>defective reversing circuit on power interface card</p>
Power Interruption  <ul style="list-style-type: none"> • Continuous alarm sounds. • Red Alarm LED lights. • Message is displayed in the Status Area 	<p>Power to the unit has been disrupted for longer than 2 minutes.</p> <p>If the power is disrupted for more than 2 minutes, the process must be restarted.</p> <p>Press Alarm Reset button on keypad to reset this alarm. Icon will disappear from the display.</p>	<p>Power failure.</p>

Alert/Alarm Combination	Message	Possible Problem
<p>Process HOLD</p>  <ul style="list-style-type: none"> • Audible alarm sounds. • Yellow LED lights. • Screen turns yellow color • Message is displayed in the Status Area 	<p>A process HOLD has been engaged, either automatically from parameters entered in the program step, or manually entered by the operator.</p> <p>A Status Message appears – “Program Halted, Operator Action Required”</p> <p>Press Continue  icon and the program will continue or advance to the next step.</p>	

Other general information messages will display in the Status area. This area is used to relay information to the operator about the success or failure of certain functions. Some of these messages include:

- “Program Saved Successful”
- “Program Deleted”
- “Copy Program Successful”
- “Operator Access Changed Successfully”
- “Pass code Changed Successfully”
- Many others

Appendix

Specifications

External Dimensions (H x W x D)	864mm x 597mm x 648mm 26.4" x 22.4" x 26.8"
Internal Dimensions (H x W x D)	500mm x 450mm x 330mm (19.7" x 17.7" x 13")
Weight	74 Kg, 163 lbs
Electrical Supply	230V AC $\pm 10\%$, 50/60 Hz
Heating Power	3000 W
Total Power	3850 W
Operating Temperature	5°C to 40°C (Environmental) 80% max. relative humidity up to 31°C 50% relative humidity up to 40° C.
Approvals	UL, CSA, CE

* Specifications subject to change without notice.

Minimum/Maximum Beaker Loads

Minimum Beaker Load

Beaker Size	Minimum No. of Beakers
150cc	4 beakers
300cc	4 beakers
500cc	4 beakers
1000cc	4 beakers

Maximum Beaker Load

Beaker Sizes (max)	Maximum # of Beakers	Ideal Sample Size
150 ml	20 beakers	5 grams
300 ml	15 beakers	10 grams
500 ml	8 beakers	25 grams
1000 ml	8 beakers	50 grams
5 liter	1 beaker	250 grams





















Maintenance List






















Below is a routine maintenance checklist and schedule of tasks that should be performed to insure the proper operation of the unit.





















Machine Part/ Procedure	Party Responsible for Maintenance	Every Cycle	Quarterly	Yearly
Accessories Wash beakers, beaker lids, and dosing accessories thoroughly. Flush nipples with clean, warm water..	User	X		
Machine Keep the interior surfaces clean and shiny in order to maximize reflection.	User	X		
Dyeing Beaker Check for leaks. Replace O-ring if necessary.	User	X		
Drive Check belts and listen for drive noise. If necessary, adjust or replace belts	Datacolor Service			X
Speed of the Drive Check and calibrate, if necessary. Tolerance = ± 2 rpm.	Datacolor Service			X
Temperature Calibration Check the temperature calibration and adjust if necessary. Tolerance $\pm 1^{\circ}\text{C}$ <i>NOTE: Contact Datacolor Service personnel to complete this check.</i>	Datacolor Service personnel			X
Gradient Test Test and ensure maximum achievable gradient is within tolerance. Make repairs as needed.	Datacolor Service personnel			X



















Glossary of Icons

Below are a listing of the screens on the Ahiba IR Pro controllers and the active icons on each screen.

Screen	Icon Use	Icon
Main menu, "System Idle"	Run Menu	
	Manual mode	
	Directory menu	
	Tool menu	
	Login	
	Logout	
Run menu Screen	Run Program	
	Delayed Run	
	Home Screen	
Process Running Screen	Stop Program	
	HOLD Program	
	Continue Program	
	Graph scroll left	
	Graph scroll right	
	Home Screen	
Delayed run screen	Delay program save	
	Delay program cancel	
	Previous screen	
	Home Screen	
Manual mode screen	Run manual program	

Screen	Icon Use	Icon
Manual mode screen	Stop manual program	
	Home Screen	
Directory menu screen	View local Memory	
	View ext. Memory	
	View History local	
View Local menu Screen	Delete Program	
	Delete All Programs	
	Edit Program	
	Save External	
	Copy Program	
	Run Program	
	Previous screen	
	Home Screen	
	Login	
	Logout	
View Ext. menu screen	Load ext. Memory	
	Delete Program	
	Delete All Programs	
	Previous screen	
	Home Screen	
View history local	Previous Screen	


Screen	Icon Use	Icon
View history local	Home Screen	
Edit info menu	Previous Screen	
	Home Screen	
	Enter	
Edit program screen	New Step	
	Insert Step	
	Delete Step	
	Save Changes	
	Previous step	
	Next step	
	Temperature	
	Gradient	
	Isotherm time	
	RPM	
	CW/CCW	
	Hold	
	Previous Screen	
	Home Screen	
Tool Screen	Configuration menu	
	user setup	

Screen	Icon Use	Icon
User setup menu screen	Temp_time Setup	
	Language	
	Passcode setup	
	Operator access	
	Previous Screen	
	Home Screen	
Temp time setup	Save Changes	
	Previous Screen	
	Home Screen	
Passcode	Save Changes	
	Previous Screen	
	Home Screen	
Language	Save Changes	
	Previous Screen	
	Home Screen	
Operator access	Save Changes	
	Previous Screen	
	Home Screen	

Accessories


Beaker Preparation Basket

A beaker preparation basket is available with the unit. You must assemble it. Below is an assembly diagram:

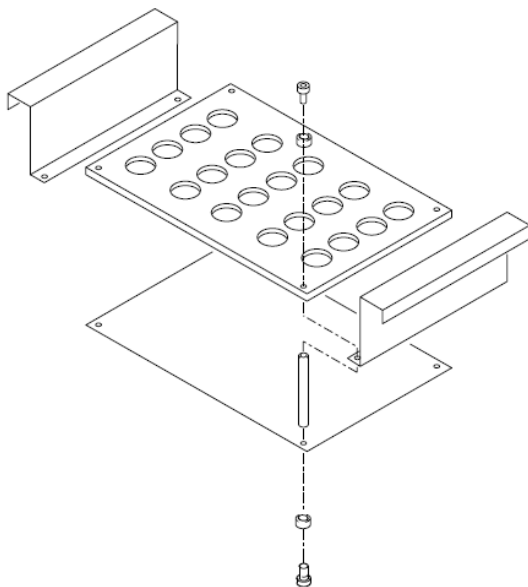

Below is a picture of a fully loaded beaker prep basket.

Beaker Prep Basket

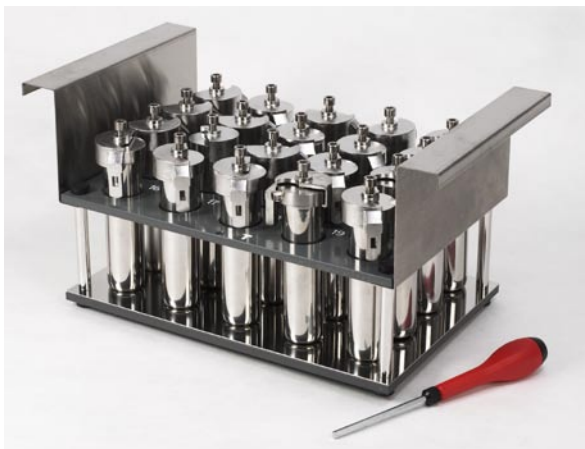

Dosing Accessories

Accessories are available for both membrane dosing and injection dosing techniques.

Membrane Dosing



Injection Dosing




Dosing Syringe Parts



CAUTION

Thoroughly rinse the dosing syringe with warm water following each use. This cleans the interior of the parts, extends the life of the seals and prevents clogging due to dried chemicals.

Below is information for ordering replacement parts from Datacolor for the dosing syringe:

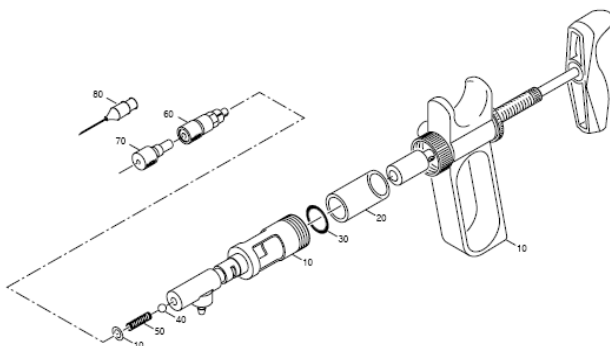

Drawing Position	Description	Part No
10	10cc Dosing Injector	474070
20	Dosing Injector 10cc	474077
30	Glass cylinder 10cc	474080
40	Seal to injector	474082
50	Valve Ball	474081
60	Valve Spring	474007
70	Dosing Adapter Teflon Seal	474083
20	5cc Dosing Injector Glass cylinder 5cc	474087
80	Membrane Dosing Needle (pack of 12)	842016

NOTES

Index

A

Accessories, 4, 48
Alarms, 37
Audible Alerts, 37

B

Beaker
 cleaning, 15, 20
 connections, 17
 dosing, 19
 installation, 15
 maintenance, 15, 20
 min/max loads, 42
 prep basket, 20, 48
 preparation, 15
 rotation, 8
 securing the lids, 15
Beakers, 4

C

Controller, 22
Controller Power Supply, 14
Controls, 9
Cooling, 7
Cooling Source, 3

D

Dosing Accessories, 49
Dyeing Positions, 3

E

Equipment, 9

H

Heating, 7
Heating Source, 3

I

Indicators, 9

L

LED Process Indicators, 26
Limit Values, 31
Liquor Ratio, 3

M

Maintenance, 11, 43

N

Numeric Keypad, 27

O

Operating Principles, 7

P

Power Connections, 12
Precautions, 5, 6
 chemical handling, 7
 electrical, 6
 environmental, 6
 maintenance, 6
 use, 6
Program
 editing, 33
 hold, 36
 running, 35
 storing, 32
Program Controls, 21
Program Directory, 26, 28
Programs, 31

S

Safety Labels, 5

Specifications, 41
Status Messages, 37
System Idle, 22
System Location, 11
System Setup, 11

T

Temperature Monitoring, 3
Temperature Sensor Cable, 18
Troubleshooting, 38

Type of Fibers, 3
Types of Substrates, 3

U

User Interface, 3, 22

W

Wash fastness Testing, 3