### ITMProcess2

# Volume change in template

#### **Overview**

Concerned User, Supervisor

Subject How to change the bath volume inside a recipe template.

In Job ticket, it is not possible to change the volume in Operation. But it is possible to introduce a factor in the Recipe Template call-off.

The call-off volume will be equal to the dyelot volume multiplied by this factor.

## **General**


Version

The call-off factor feature is available since ITMProcess JobTicket v2.3.2. Current document has been written at ITMProcess JobTicket v2.3.2.

# Configure

**Tank** 

In order to print the volume of the call-off, the use of a tank is necessary. Create a tank for each kind of call-off.

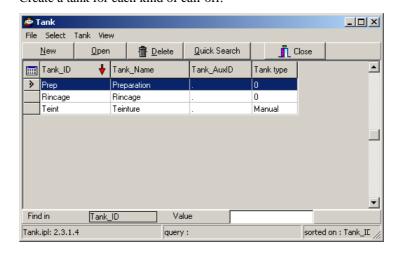

#### Use

Create a recipe template.

For each volume change, insert a call-off, indicate the tank and insert the volume factor.

Ex: 0,5 for the half of the dyelot volume.



When you print the dyelot, the production card indicates the call-off volume and calculates the product quantities according to this volume.

